powering tomorrow
Growatt

Growatt 2000HF-US

Growatt 2500HF-US

Growatt 3000HF-US

Installation & Operation Manual ▶

GROWATT NEW ENERGY NORTH AMERICA INC.

CityCentre One,800 Town & Country Blvd,
Suite 300, Houston, TX, 77024, USA

T + 832 615 5047

F + 713 266 1243

W www.growattusa.com

GR - UM - 008 - 02

Directory

1 Notes on this manual
- 1.1 Validity
- 1.2 Target Group
- 1.3 Safety

2 Growatt Inverter
- 2.1 Overview
- 2.2 Identifying label

3 Unpacking and inspection

4 Installation
- 4.1 Safety instructions
- 4.2 Selecting the installation location
- 4.3 Fixing the mounting on the wall
- 4.4 Fixing the inverter on the wall
- 4.5 Checking Iinverter installation Status

5 Electrical Connection
- 5.1 System Diagram with Inverter Electrical connection
- 5.2 Safety
- 5.3 Connecting to the grid (AC utility)
- 5.4 Connecting to PV Panel (DC input)
- 5.5 Commissioning

6 Display and Messages
6.1 LCD display
6.2 LCD control
6.3 Setting the LCD display

7 Modes of Operation
7.1 Normal mode
7.2 Fault mode
7.3 Shutdown mode

8 Inverter Status

9 Communitions
9.1 ShineNet
9.2 ShineVision
9.3 ShinePano
9.4 ShineWebBox

10 Trouble Shooting

11 System Fault

12 Inverter Failure

13 Specifications

14 Growatt Factory warranty

15 Warranty conditions

16 Contact

1.1 Validity

This manual describes the assembly, installation, commissioning and maintenance of the following Growatt Inverters:

Growatt 2000HF-US
Growatt 2500HF-US
Growatt 3000HF-US

This manual does not cover any details concerning equipment connected to the Growatt (e.g. PV modules). Information concerning the connected equipment is available from the manufacturer of the equipment.

1.2 Target Group

This manual is for qualified personnel. Qualified personnel have received training and have demonstrated skills and knowledge in the construction and operation of this device. Qualified Personnel are trained to deal with the dangers and hazards involved in installing electric devices.

Additional information

Find further information on special topics in the download area at www.growattusa.com

1.3 Safety

Appropriate Usage

The Growatt is a PV Inverter that converts DC Current from PV generator into AC current. The Growatt is suitable for mounting indoors and outdoors.

You can use the AC current gernerated as follows:

House grid:

Energy flows into the house grid. The consumers connected, for example, household devices or lighting, consume the energy. The energy left over is fed into the public grid. When the Growatt is not gernerating any energy, e.g., at night, the consumers which are connected are supplied by the public grid. The Growatt does not have its own energy meter. When energy is fed into the public grid, the energy meter spins backwards.

Public grid

Energy is fed directly into the public grid. The Growatt is connected to a separate energy meter. The energy produced is compensated at a rate depending on the electric power company.

Info: Policies vary from one utility company to another. Consult with a representative of the local utility company before designing and installing a PV system.

Information: Les règles peuvent varier d'une entreprise de service public à une autre. Veuillez consulter un représentant de l'entreprise de service public locale avant de concevoir et installer un système PV.

DC and AC Switch

Separate the Growatt securely from the grid and the PV generators using DC and AC Switch. DC and AC Switch shall be able to disconnect all unground conductors after installation.You must provide an AC circuit breaker. If Growatt DC Switch is included in the delivery of the Growatt, it is used for operating the inverter but not disconnecting the inverter from the PV module.

Grounding the PV modules

The Growatt HF series inverter is a high frequency transformer inverter. That is galvanic separation. PV input of inverter had been ground before leave factory. PV+ ground or PV- ground depend on the characteristic of module.

2.1 Overview

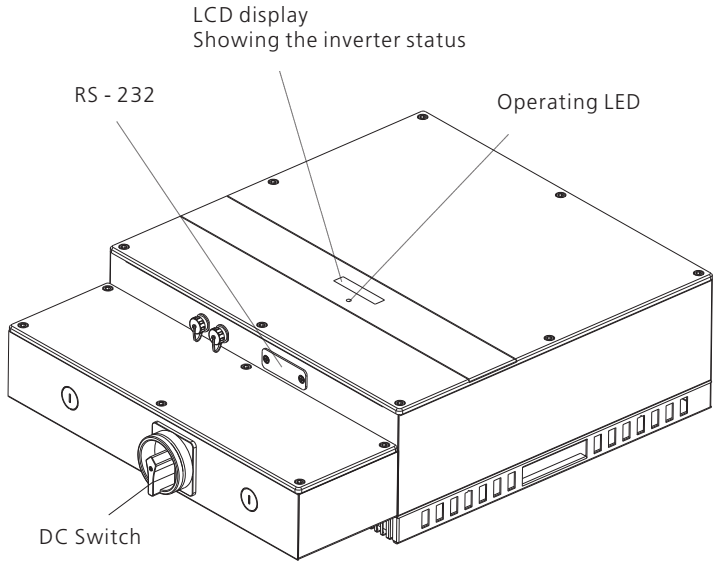

2.2 Identifying label

You can identify the pv inverter by the type label.
It is on the left side of the enclosure.

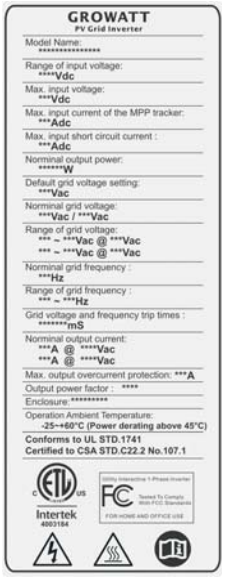

- The type of product (Type/Model).
- Device-specific characteristics.
- Certificates and approvals.

3 Unpacking and inspection

After opening the package, please check the contents of the box.
It should contain the following:

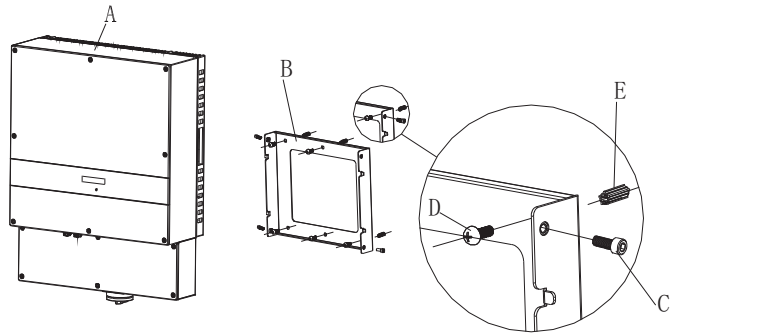

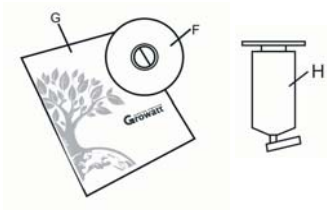

Item	Name	Quantity
A	solar inverter	1
B	Mounting frame	1
C	Safety-lock screws	4
D	Mounting screws	6
E	Mounting frame screws sleeve	6
F	Monitor software(disk)	1(Optional)
G	manual	1
H	Bluetooth	1(Optional)

Warning! Before installation, make sure the PE is connected to the ground.

4.1 Safety instructions

A All electrical installations shall be done in accordance with the local and national electrical codes ANSI/NFPA 70, NEC. The Growatt inverters are listed to UL1741/IEEE1547 . Do not remove the casing. Inverter contains no user serviceable parts. Refer servicing to qualified service personnel.

B Both AC and DC voltage sources are terminated inside the PV Inverter. Please disconnect these circuits before servicing.

C When a photovoltaic panel is exposed to light, it generates a DC voltage. When connected to this equipment, a photovoltaic panel will charge the DC link capacitors.

D Energy stored in this equipment's DC link capacitors presents a risk of electric shock. Even after the unit is disconnected from the grid and photovoltaic panels, high voltages may still exist inside the PV-Inverter. Do not remove the casing until at least 5 minutes after disconnecting all power sources.

E This unit is designed to feed power to the public power grid (utility) only. Do not connect this unit to an AC source or generator. Connecting Inverter to external devices could result in serious damage to your equipment.

F Carefully remove the unit from its packaging and inspect for external damage. If you find any imperfections, please contact your local dealer.

G Although designed to meet all safety requirements, some parts and surfaces of Inverter are still hot during operation. To reduce the risk of injury, do not touch the heat sink at the back of the PV-Inverter or nearby surfaces while Inverter is operating.

Consignes de sécurité

A Toute installation électrique doit être faite en accord avec les normes électriques locales et nationales ANSI/NFPA 70, NEC. Les onduleurs Growatt sont listés à UL1741/IEEE1547. Ne pas retirer le revêtement. L'onduleur contient des parties non utilisables. Veuillez vous référer à un employé de service qualifié.

B Les sources de voltage CA et CC se trouvent à l'intérieur de l'onduleur PV. Veuillez déconnecter ces circuits avant manipulation.

C Lorsqu'un panneau photovoltaïque est exposé à la lumière, il génère un courant continu. Connecté à cet équipement, un panneau photovoltaïque rechargera les condensateurs de liaison CC.

D L'énergie stockée dans les condensateurs de liaison CC de cet équipement présentent un risqué de choc électrique. Même après la déconnection de l'unité de la grille et des panneaux photovoltaïques, une surtension peut toujours être présente dans l'onduleur PV. Ne pas retirer le revêtement jusqu'à au moins 5 minutes après avoir déconnectés toutes les sources d'énergie.

E Cette unité a été conçue pour fournir de l'énergie uniquement aux réseaux électriques publics. Ne pas connecter cette unité à une source de courant alternatif ou à un générateur. Connecter un onduleur à des appareils externes peut causer de graves dommages à votre matériel.

F Retirer prudemment l'unité de son emballage et inspectez la pour d'éventuels dommages extérieurs. Si vous trouvez quelconques imperfections, veuillez contacter votre revendeur local.

G Bien que conçu afin de remplir tous les critères de sécurité, certaines parties ou surfaces de l'onduleur sont chaudes pendant son fonctionnement. Afin de réduire le risques de blessures, ne pas toucher le dissipateur de chaleur à l'arrière de l'onduleur PV et toute surface avoisinante lors du fonctionnement de l'onduleur.

4.2 Selecting the INSTALLATION location

A Raintight or wet location hubs that comply with the requirements in the Standard for Conduit, Tubing, and Cable Fittings, UL 514B, are to be used.

B The unit shall be mounted at least 914 mm (3 feet) above the ground.

C The installation method and mounting location must be suitable for the weight and dimensions of the inverter. Select a wall or solid vertical surface that can support the PV-Inverter.

D Mount on a solid surface,The mounting location must be accessible at all times.

E Vertical installation or tilted backwards by max. 15°.

F The connection area must point downwards.

G Do not install horizontally.

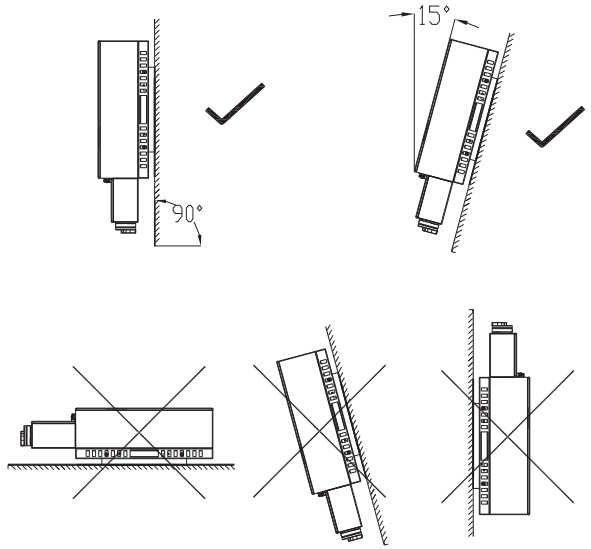

4.3 Fixing the mounting on the wall

A Inverter requires adequate cooling space. Allow at least 20cm space above and below the inverter.

B Using the mounting frame as a template, drill 4 holes as illustrated in image

C Fixing the mounting frame as the figure shows. Do not make the screws to be flush to the wall. Instead, leave 2 to 4mm exposed.

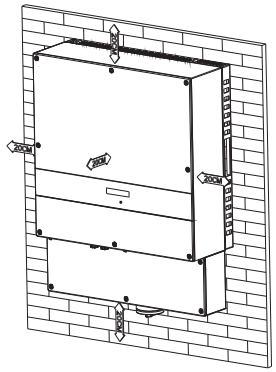

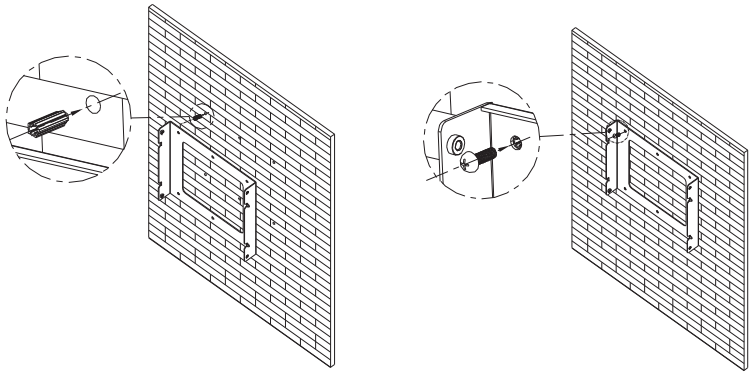

4.4 Fixing the inverter on the wall

Hang the inverter on the mounting frame.

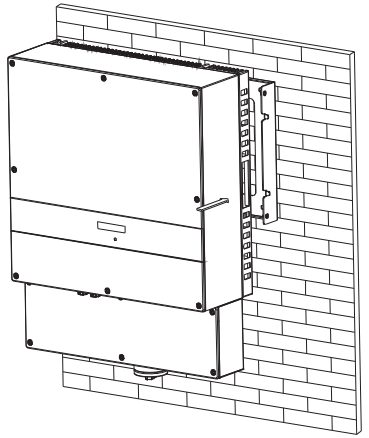

4.5 Checking Inverter Installation Status

A Check the upper straps of PV-Inverter and ensure it fits on to the bracket.

B Check the secure mounting of the PV-Inverter by trying to raise it from the bottom.The PV-Inverter should remain firmly attached.

C Select the installation location so that the status display can be easily viewed.

D Choose a strong mounting wall to prevent vibrations while inverter is operating.

5 Electrical Connection

WARNING:

All electrical installations shall be done in accordance with the local and national electrical codes ANSI/NFPA 70, NEC.

AVERTISSEMENT :

Toute installation électrique doit être effectué en accord avec les norms électriques locales et nationales ANSI/NFPA 70, NEC.

WARNING:

Policies vary from one utility company to another. Consult with a representative of the local utility company before designing and installing a PV system.

AVERTISSEMENT:

Les règles peuvent varier d'une entreprise de service public à une autre. Veuillez consulter un représentant de l'entreprise de service public locale avant de concevoir et installer un système PV.

5.1 System Diagram with Inverter Electrical connection

A — This unit or system is provided with fixed trip limits and shall not be aggregated above 30 kW on a single Point of Common Connection.

B — PV Panel: Provide DC power to inverter.

C — Converts DC (Direct Current) power from PV panel(s) to AC (Alternating Current) power. Because Inverter is grid-connected it controls the current amplitude according to the PV Panel power supply. Inverter always tries to convert the maximum power from your PV panel(s).

D — Connection system: This "interface" between Utility and PV-Inverter may consist of electrical breaker, fuse and connecting terminals. To comply with local safety standards and codes, the connection system should be designed and implemented by a qualified technician.

E — Utility: Referred to as "grid" in this manual, is the way your electric power company provides power to your place.

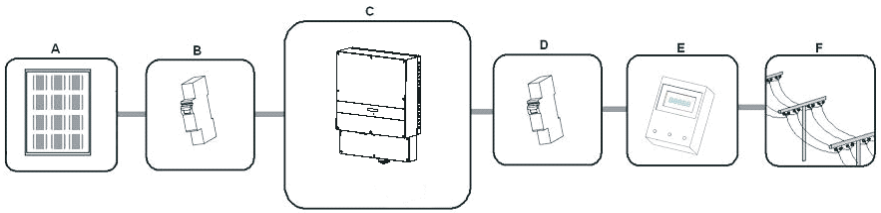

Position	Description
A	PV modules
B	DC load circuit breaker
C	Growatt Inverter
D	AC load circuit breaker
E	Energy meter
F	Utility grid

Wire Box

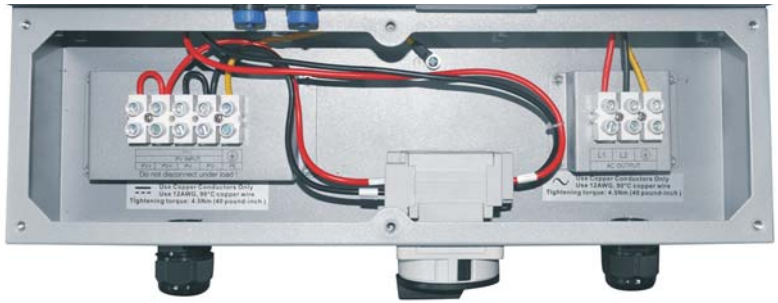

5.2 Safety

The Growatt Inverter must be connected to the AC ground from the utility via the Ground Terminal (PE).

5.3 Connecting to the grid (AC utility)

5.3.1 GRID standards

Based on the local GRID standards, it is possible to select different connection types. The available configurations are shown in the following table:

GRID STANDARD	L1 / L3 / L2			L1 / L2 / L3		
	208Vac 3phase-△			240Vac 3phase-△		
TERMINAL	1	2	3	1	2	3
WIRE	L1	L2	PE	L1	L2	PE
NET MODEL	NET MODEL:2 (Option)			NET MODEL:3 (Default)		

figure 5.3.1

IMPORTANT:

If several GROWATT are installed in a tree-phase AC GRID. it is recommended to distribute the inverters between the phases in order to reduce the power unbalances between the phases. Always refer to the local standards.

IMPORTANT:

si plusieurs GROWATT sont installés sur un réseau électrique à courant alternatif à trois phases. Il est recommandé de distribuer les onduleurs entre les phases pour réduire les déséquilibres de puissance entre les phases. Toujours vous référer aux normes locales.

Before wiring the GROWATT -US inverter, the installer needs to determine the grid configuration that the inverter will be connected to. The Growatt inverter is defaulted for utility interconnection with 240Vac from factory. However, you can choose the Net MODEL through the LCD to set the GROWATT inverter to be fitted the commonly used utility configuration types as shown in the figure 5.3.1.

Connection of the AC wiring (AC output)

A Make sure grid (utility) configuration types ,if it is not the 240Vac Split Phase .you should use the LCD to set the right net model as chapter 6.3.

B Open the breaker or fuse between PV Inverter and utility.

C Open the wire box cover and the knockout.

D For Inverter , connect AC wires of all net model as figure 5.3.1:

E Cable requirements

Model	_(mm)	Area(mm²)	AWG no.
Growatt 2000HF-US	_2.05	3.332	12
Growatt 2500HF-US	_2.05	3.332	12
Growatt 3000HF-US	_2.05	3.332	12

5.4 Connecting to PV Panel (DC input)

WARNING:

RISK OF ELECTRIC SHOCK AND FIRE . USE ONLY WITH PV MODULES WITH A MAXIMNM SYSTEM VOLTAGE OF RATING!

WARNING:

ELECTRIC SHOCK HAZARD. THE DC CONDUCTORS OF THIS PHOTOVOLTAIC SYSTEM ARE NORMALLY UNGROUNDED BUT WILL BECOME INTERMITTENTLY GROUNDED WITHOUT INDICATION WHEN THE INVERTER MEASURES THE PV ARRAY ISOLATION!

DC input Connection terminal

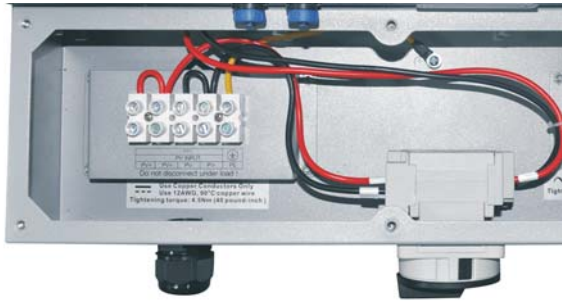

A Under any condition! Make sure the maximum open circuit voltage (Voc) of each PV string is less than 600Vdc for Growatt 2000HF-US, Growatt 2500HF-US and Growatt 3000HF-US.

B Open the independent DC circuit breaker as well as the DC switch on the Growatt -US inverter.

C Before connecting PV panels to DC terminals, please make sure the polarity is correct. Incorrect polarity connection could permanently damage the unit. Checks short-circuit current of the PV string. The total short-circuit current of the PV string should be less than the inverter's maximum DC current.

D Connect the positive and negative terminals from the PV panel to positive (+) terminals and negative (-) terminals on the PV-Inverter. Each DC terminal on Inverter can withstand 15Adc for Growatt 3000HF-US and Growatt 2500HF-US,12Adc for Growatt 2000HF-US.

E High voltages exist when the PV panel is exposed to the sun. To reduce risk of electric shock, avoid touching live components and treat connection terminals carefully.

Cable requirements:

Model	_(mm)	Area(mm²)	AWG no.
Growatt 2000HF-US	_2.05	3.332	12
Growatt 2500HF-US	_2.05	3.332	12
Growatt 3000HF-US	_2.05	3.332	12

5.5 Commissioning

A When the PV panels are connected and their output voltage is greater than 100 VDC but the AC grid is not yet connected, the message on the LCD display produce the following messages in order: "Growatt Inverter"-> "Waiting" -> "No AC connection". The display repeats "No AC connection" and the LED will be red.

B Close the AC breaker or fuse between PV-Inverter and grid. The normal operating sequence begins.

C Under normal operating conditions the LCD displays "Power: xxxx.xW". That is the power fed to the grid. The LED turns green.

D This completes the check.

6 DISPLAY

6.1 LCD display

Starting-up display sequence,Once the PV power is sufficient,Inverter displays information as shown in the flow chart as follow:

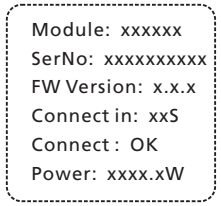

6.2 LCD control

To save power, the LCD display's backlight automatically turns off after 30 seconds. The display on the inverter can be control by Knock on the front of it.

The first line will show some status of the inverter, there are 5 status listed in below table.

The First Line Of LCD

STATE	DISPLAY CONTENT	REMARK
Wait State	Standby	PV voltage low
	Waiting	Initial waiting
	Connect in xxS	System checking
	Reconnect in xxS	System checking
Inverter State	Connect OK	Connect to Grid
	Power: xxxx.xW	Inverter watt at working
Fault State	Error: xxx	System Fault
Auto Test State	Auto Testing	Protection auto test
Program State	Programming	Update Software

While Growatt inverter is working, the first line will normally show Power status:

The Second line can change by knock on

The Second Line Of LCD

CYCLE DISPLAY	DISPLAY TIME/S	REMARK
	2	The inverter model
	2	The software version
	2	The Serial Number
	4	The energy today
	4	The energy all
	4	PV input watt

CYCLE DISPLAY	DISPLAY TIME/S	REMARK
Power : 2103.4W PV:313 B:370V	4	The PV and Bus Votage
Power : 2016.2W AC:241V F:60.0Hz	4	The grid system
Enable auto test Power : 2021.8W Enale Auto Test	4	The enable auto test
Set Language Power : 2019.5W Set Language	4	Set Language
Set contrast Power : 2008.2W Set LCD Contrast	4	Set LCD Contrast
Set COM Address Power : 2019.5W COM Address:Move	4	Set Communications Address
Set Grid Model Power : 2016.2W Net Model: 1	4	Set Grid Model

6.3 Setting the LCD display

Sound control can define the display language, luminance of the display, auto-test and utility model choice. When the LCD is dark, Knock and double knock make it becomes bright. Knock to make it display next information or change the set situation. Double knock make the display stand for 30 second on 1-5. And enter set

Setting language

Knock to make the display bright→ knock to"set language"→ double knock to enter"language: English"→knock to select the language you need and wait until the display become dark.

Setting luminance of the display

Knock to make the display bright →knock to"set LCD contrast"→double knock to enter"LCD contrast 2"→knock to select the luminance you need and wait until the display become dark.

Setting communication address

Knock to make the display bright→knock to "COM Address:xx" →double knock to change the Address model→clock to set address.

Setting utility model choice

Knock to make the display bright→ knock to"Net Model: xx" →double knock to enter"Net Model: xx"→knock to select the Utility model you need and wait until the display become dark

Auto test

Knock to make the display bright→ knock to"Enable Auto test"→double knock to enter "Waiting to start"→knock to start auto test and wait for the test result.

7 MODES OF OPERATION

There are 3 different modes of operation.

7.1 Normal mode

In this mode, Inverter works normally. Whenever the supplied power from PV panel is sufficient (voltage>150VDC), Inverter converts power to the grid as generated by the PV panel. If the power is insuf¬ficient(voltage<120VDC) , Inverter enters a "waiting" state. Whilst "waiting" Inverter uses just enough power from the PV panel monitor internal system status. In normal mode the LED is green.

7.2 Fault mode

The internal intelligent controller can continuously monitor and adjust the system status. If Inverter finds any unexpected conditions such as grid problems or internal failure, it will display the information on its LCD and the LED will be red.

7.3 Shutdown mode

During periods of little or no sunlight, Inverter automatically stops running. In this mode, Inverter does not take any power from the grid. The display and LED's on the front panel do not work.

Notes :
Operating inverter is quite easy. During normal operation, Inverter runs automatically. However, to achieve maximum conversion efficiency of Inverter, please read the following information:

Notes :
Le fonctionnement d'un onduleur est assez facile. Lors d'une phase normale, l'onduleur fonctionne automatiquement. Cependant, afin d'atteindre l'efficacité de conversion maximale de l'onduleur, veuillez lire les instructions suivantes :

Automatic ON-OFF: Inverter starts up automatically when DC-power from the PV panel is sufficient.

Once the PV-Inverter starts it enters one of the following 3 states:

1. Standby: The PV string can only provide just enough voltage to minimum requirements of the controller.
2. Waiting: When the PV string DC voltage is greater than 100V, Inverter enters "waiting" state and attempts to connect to the grid.
3. Normal operation: When PV string DC voltage is greater than 150V, Inverter operates in the normal state.

INVERTER STATUS 8

Inverter is designed to be user-friendly; therefore, the status of the Inverter can be easily understood by reading the information shown on the front panel display. All possible messages are shown in the following table.

system fault

DISPLAY	OPERATION
Auto Test Failed	Auto Test do not pass
No AC Connection	No Utility, No Grid Connect
GFDI Fault	Leakage current too large
PV Voltage High	PV panel Voltage too high
AC V Outrange	Grid Voltage out of range
AC F Outrange	Grid Frequency out of range

Inverter fault

DISPLAY	OPERATION
Error: 100	2.5V Reference Voltage Fault
Error: 101	Communication Fault
Error: 102	Consistent Fault
Error: 116	EEPROM Fault
Error: 117	Relay Fault
Error: 118	Init Model Fault
Error: 120	HCT Fault
Error: 121	Communication Fault
Error: 122	Bus Voltage Fault
Error: 123	Auto Test Fail

9 Communication

9.1 ShineNet

ShineNet is a monitoring software applied to monitor Growatt inverters via RS232 port or Bluetooth module. With the special designed functions and friendly compact UI, it can comprehensively meet users' requirements for system monitoring and bring unprecedented user experience.

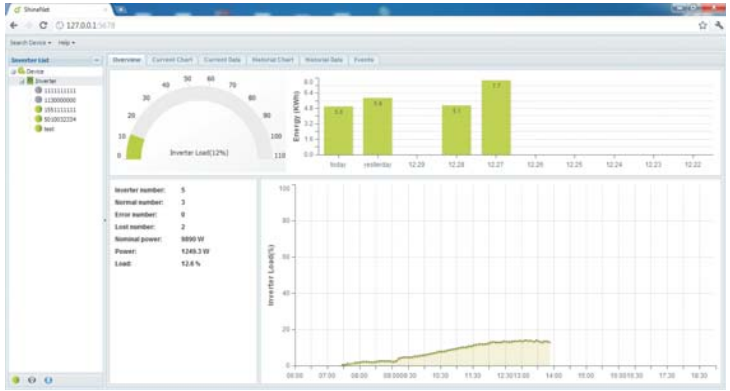

Fig 9.1

Features:

- Monitor and record current data and of inverters.
- Record historical data.
- Monitor and record event information of inverter.
- Connect computer and inverter via RS232 and RS485 port (wire connection) or Bluetooth module (wireless connection).
- Remote access available for local area network.

Notes: Users are able to monitor the inverter after the setting of software. Detailed information about setting and functions refer to the ShineNET Manual.

Notes: you can download the ShineNet from: ftp://113.106.58.169 , the user name is ftpguest and Password is ftpguest

9.2 ShineVision

ShineVision is a wireless monitoring device, which consists of a power monitor and a number of transmitters, and one shinevision can monitoring 1 to 6 inverters. The transmitters transmit the running data collected from photovoltaic inverters to the monitor and display the data onto the monitor screen, including data of generated energy, the gross generated energy and the generation income obtained from the above-mentioned data through some simple calculations, indoor temperature, date and time, as well as CO2 emissions.

Fig 9.2

Features:

- Monitor and transmitter communicate via wireless communication technology.
- External transmitter, with IP65 waterproof and dustproof.
- A monitor can simultaneously communicate with six transmitters.
- Communication distance between monitor and transmitter : 30 meter.
- Power supply option: built-in battery slot, an external DC power supply.
- Easy installation, and convenient to use it.

Notes: The Monitor should be kept indoor. For detailed information, please refer to ShineVision Manual.

9.3 ShinePano

It is the latest intelligent monitoring master, specially designed for solar power plant. Using stable Linux operating system with high-speed CPU, it can smartly present solar system status through friendly user interface on 8-inch large color touch screen.

Fig 9.3

Features:

- A multi-functional and high-performance communication data logger; Keep user informed of the system's status at any time.
- Massive storage with flexible parameters setting, system information management, error prompt and record.
- Collects data and uploads information over the internet in near real-time to Growatt Shine Server platform.
- Connect with inverter: RS485 and Zigbee (Wireless module).
- 8 inches touch screen(*option): support hand writing and USB mouse.

9.3 ShineWebBox

It is a cost-effective and compact monitoring device, specially designed for solar power plant. Using stable Linux operating system with high-speed CPU, it can smartly record your system features. ShineWebBox Provides local storage, easy wireless and TCP/IP configuration, and presents plant data over Internet.

Fig 9.4

Features:

- A multi-functional and high-performance communication data logger; Keep user informed of the system's status at any time.
- Massive storage with flexible parameters setting, system information management, error prompt and record.
- Collects data and uploads information over the internet in near real-time to Growatt Shine Server platform.

10 TROUBLE SHOOTING

In most situations, the Inverter requires very little service. However, if Inverter is not able to work perfectly, please refer to the following instructions before calling your local dealer.

Should any problems arise, the LED on the front panel will be red and the LCD displays the relevant information. Please refer to the following table for a list of potential problems and their solutions.

11 SYSTEM FAULT

Ground Fault

1. The ground current is too high.
2. Unplug the inputs from the PV generator and check the peripheral AC system.
3. After the cause is cleared, re-plug the PV panel and check PV-Inverter status.
4. If the problem persists please call service.

GFDI Fault

1. If panels is PV- grounded, please check the impedance between the earth and the PV-, the impedance must be less than 100Ω.
2. If panels is PV+ grounded, please check the impedance between the earth and the PV+, the impedance must be less than 100Ω.
3. The type Fuse of GFDI is DC 1000V/500mA.
4. If the problem persists please call service.

No Utility

1. Grid is not connected.
2. Check grid connection cables.
3. Check grid usability.

Fuse type	Fuse
Growatt 2000HF-US	15A/250VAC
Growatt 2500HF-US	20A/250VAC
Growatt 3000HF-US	20A/250VAC

INVERTER FAILURE 12

PV Over Voltage

1. Check the open PV voltage, see if it is greater than or too close to 600Vdc for Growatt 2000HF-US , Growatt 2500HF-US and Growatt 3000HF-US.
2. If PV voltage is less than 600Vdc for Growatt 2000HF-US , Growatt 2500HF-US and Growatt 3000HF-US, and the problem still occurs, please call local service.

Consistent Fault

1. Disconnect PV (+) or PV (-) from the input, restart the PV Inverter.
2. If it does not work, call service.
   > If there is no display on the panel, please check PV-input connections. If the voltage is higher than 150V, call your local service.
   > During periods of little or no sunlight, the PV-Inverter may continuously start up and shut down. This is due to insufficient power generated to operate the control circuits.

13 SPECIFICATIONS

	2000HF-US	2500HF-US	3000HF-US
Input Data			
Max. DC power	2200W	2700W	3200W
Max. DC voltage	600V	600V	600V
Start voltage	150V	150V	150V
DC nominal voltage	370V	370V	370V
PV voltage range	100V - 600V	100V - 600V	100V - 600V
MPP voltage range	195V - 480V	195V - 480V	250V - 480V
Number of MPP trackers/ strings per MPP tracker	1 / 2	1 / 2	1 / 2
Max. input current /per string	12A/12A	15A/15A	15A/15A
Output Data			
Nominal AC output power	2000W@208Vac 2000W@240 Vac	2500W@208Vac 2500W@240 Vac	2800W@208Vac 3000W@240Vac
Max. AC power	2000W	2500W	2800W@208Vac 3000W@240Vac
Nominal output current	9.6A/8.3A	12A/10.4A	13.4A/12.5A
Max. output current	10.7A/9.5A	13.4A/11.8A	15A/14.2A
AC nominal voltage; range	208V/240V; 183V~228V@208Vac 211V~264V@240Vac		
AC grid frequency; range	60Hz; 59.3-60.5Hz	60Hz; 59.3-60.5Hz	60Hz; 59.3-60.5Hz
Phase shift (cos φ)	>0.99	>0.99	>0.99
THDI	<3%	<3%	<3%
AC connection	Single phase	Single phase	Single phase
Efficiency			
Max . efficiency	96.5%	96.4%	96.3%
CEC.effciency	95.5%	95.5%	95.5%
MPPT efficiency	99.5%	99.5%	99.5%

	2000HF-US	2500HF-US	3000HF-US
Protection Devices			
DC reverse polarity protection	yes	yes	yes
AC short - circuit protection	yes	yes	yes
Ground fault monitoring	yes	yes	yes
Grid monitoring	yes	yes	yes
Integrated all - pole sensitive leakage current monitoring unit	yes	yes	yes
General Data			
Dimensions (W / D / H) in mm	575/455/160	575/455/160	575/455/160
Weight	22 KG	22 KG	22.5 KG
Operating temperature range	–25°C..+60°C	–25°C..+60°C	–25°C..+60°C
Continuous full output power temperature range	–25°C..+45°C	–25°C..+45°C	–25°C..+45°C
Noise emission (typical)	⩽ 25 dB(A)	⩽ 25 dB(A)	⩽ 25 dB(A)
Altitude	Up to 2000m without power derating	Up to 2000m without power derating	Up to 2000m without power derating
Consumption: operating (standby) / night	<5W /< 0.5 W	<5W /< 0.5 W	<5W /< 0.5 W
Topology	HF transformer	HF transformer	HF transformer
Cooling concept	No fan	No fan	No fan
Enclosure	Type 3R	Type 3R	Type 3R
Installation: Indoors /Outdoors	yes / yes	yes / yes	yes / yes

	2000HF-US	2500HF-US	3000HF-US
Features			
DC connection: Terminals	yes	yes	yes
AC connection: Terminals	yes	yes	yes
LCD displqy	yes	yes	yes
Interfaces: RS485/RS232/ Bluetooh/RF/ZigBee	yes / yes/ opt /opt /opt	yes / yes/ opt /opt /opt	yes / yes/ opt /opt /opt
Warranty:10years/15years	yes / opt	yes / opt	yes / opt
Certificates and approvals			

UI1741,IEEE1547,CSA C22.2 No.107.1,FCC Part15(Class A&B)

This certificate represents a 10 year warranty for the Growatt inverter products listed below. Possession of this certificate validates a standard factory warranty of 10 years from the date of purchase.

Warranted products

This warranty is applicable solely to the following products:

Growatt 2000HF-US, Growatt 2500HF-US, Growatt 3000HF-US

Limited Product Warranty

（Applicable under normal application, installation, use and service conditions)

Growatt warrants the above listed products to be free from defects and/or failure specified for a period not exceeding ten (10) years from the date of sale as shown in the Proof of Purchase to the Original purchaser.

The warranties described in these "Limited Warranties " are exclusive and are expressly in lieu of and exclude all other warranties, whether written, oral, express or implied, including but not limited to, warranties of merchantability and of fitness for a particular purpose, use ,or application, and all other obligations or liabilities on the part of GROWATT , unless such other obligations or liabilities are expressly agreed to it in writing signed and approved by GROWATT , GROWATT shall have no responsibility or liability whatsoever for damage or injury to persons or property, or for other loss or injury resulting from any cause whatsoever arising out of or related to the modules, including, without limitation, any defects in the modules or from use or installation. Under no circumstances shall GROWATT be liable for incidental , consequential or special damages howsoever caused; loss of use, loss of production, loss of revenues are therefore specifically and without limitation excluded to the extent legally permissible, GROWATT 's aggregate liability, if any, in damages or otherwise, shall not exceed the invoice as paid by the customer.

The "Limited Product Warranties" described above shall not apply to, and Growatt shall have no obligation of and kind whatsoever with respect to, any inverter which has been subjected to:

— Misuse, abuse, neglect or accident;

— Alteration, improper installation or application;

— Unauthorised modification or attempted repairs;

— Insufficient ventilation of the product;

— Transport damage;

— Breaking of the original manufacturers seal;

— Non-observance of Growatt installation and maintenance instruction;

— Failure to observe the applicable safety regulations

— Power failure surges, lighting, flood, fire, exposure to incorrect use, negligence, accident, force majeure, explosion, terrorist act, vandalism or damage caused by incorrect installation, modification or extreme weather conditions or other circumstances not reasonably attributable to Growatt.

The warranty shall also cease to apply if the product cannot be correctly identified as the product of Growatt. Warranty claims will not be honored if the type of serial number on the inverters have been altered, removed or rendered illegible.

Liability

The liability of Growatt in respect of any defects in its PV inverters shall be limited to compliance with the obligations as stated in these terms and conditions of warranty. Maximum liability shall be limited to the sale price of the product. Growatt shall accept no liability for loss of profit, resultant of indirect damage, any loss of electrical power and / or compensation of energy suppliers within the express meaning of that term.

The warranty rights as meant herein are not transferable or assignable to any third party excepting the named warranty holder.

Warranty conditions 15

If a device becomes defective during the agreed Growatt factory warranty period and provided that it will not be impossible or unreasonable, the device will be, as selected by Growatt,

1. Shipped to a Growatt service center for repair, or

2. repaired on-site, or

3. exchanged for a replacement device of equivalent value according to model and age.

The warranty shall not cover transportation costs in connection with the return of defective modules. The cost of the installation or reinstallation of the modules shall also be expressly excluded as are all other related logistical and process costs incurred by all parties in relation to this warranty claim.

16 Contact

If you have technical problems concerning our products, contact your installer or Growatt. During inquiring, please provide below information:

1. Inverter type
2. Modules information
3. Communication method
4. Serial number of Inverters
5. Error code of Inverters
6. Display of inverters